

CLIP top – scharniersysteem



► TIP-ON voor deuren

►► Overzicht – hoekscharnieren zonder veer

CLIP top

Scharnier		Top					
 40° 45° 50° 95°	 +45° I – hoekscharnier halfopslaand	INSERTA					
		Schroeven					
118		Inpersen					
 40° 45° 50° 110°	 +45° II – hoekscharnier opslaand	INSERTA					
		Schroeven					
120		Inpersen					
 40° 45° 50° 95°	 +45° III – hoekscharnier volledig opslaand	INSERTA					
		Schroeven					
122		Inpersen					
 25° 30° 35° 95°	 +30° II – hoekscharnier opslaand	INSERTA					
		Schroeven					
124		Inpersen					
 25° 30° 35° 95°	 +30° III – hoekscharnier volledig opslaand	INSERTA					
		Schroeven					
126		Inpersen					
 15° 20° 25° 95°	 +20° II – hoekscharnier opslaand	INSERTA					
		Schroeven					
128		Inpersen					
 10° 15° 20° 95°	 +15° III – hoekscharnier volledig opslaand	INSERTA					
		Schroeven					
130		Inpersen					
 -5° 5° 95°	 ±5°-hoektoepassing	INSERTA					
		Schroeven	70T9550.TL	70T9650.TL	70T9750.TL		
132		Inpersen					
 -20° -15° -10° 110°	 -15° III – hoekscharnier volledig opslaand	INSERTA					
		Schroeven					
134		Inpersen					
 -35° -30° -25° 110°	 -30° III – hoekscharnier volledig opslaand	INSERTA					
		Schroeven					
136		Inpersen					
 -50° -45° -40° 110°	 -45° III – hoekscharnier volledig opslaand	INSERTA					
		Schroeven					
138		Inpersen					